


L36341-100 Lubricator: Sight Dome Repair Kit# 104470 Installation

		
<p>Relieve all air pressure in the system. Remove the Cover from the Lubricator Body.</p>	<p>Use a spanner to remove the Sight Dome Housing.</p>	<p>The Outer and Inner Sight Domes should be threaded together. Pull them out.</p>
		
<p>View of the Inner (L) and Outer (R) Sight Domes with the O-Rings installed.</p>	<p>Install two Sight Domes into Lubricator Body</p>	<p>Secure with the Sight Dome Housing.</p>
		
<p>Reinstall the Upper Cover into the Lubricator Body.</p>		